

Replace batteries in your Remote and Receiver

You will need:

3 x AAA batteries for remote control (older remote controls have 2x AA batteries)

4 x AA batteries for the receiver box.

Change the AAA batteries in your remote.

1. You will find the battery cover located on the underside of your remote control.
2. Remove the battery cover.
3. Take out the old batteries, and insert the new AAA batteries, taking care to put the + and - in the correct position.

Change the AA batteries in your receiver box.

1. Open the door at the bottom of your heater.
2. Inside you will find the receiver on the right. It is a black rectangle, with a switch that slides, and the words "ON", "REMOTE", and "OFF".
3. On the receiver, you will see 2x small screws holding the black rectangular panel in place.
4. Undo the two screws, and remove the black panel. You will need to have the switch in the "On" position to remove this panel.
5. Now move the switch back to the "Remote" position.
6. You will see the batteries located behind a cover that has - + - +, and (4) AA Batteries.
7. Remove this cover by carefully releasing the clips. The clips are fragile, so it is important to use adequate care when releasing and reattaching them.
8. Take out the old batteries.
9. Insert the new batteries, making sure you follow the - + - + directions on the battery cover that you have removed.
10. Now replace the battery cover.
11. Press the program ("PRG") button located at the top right of the receiver box to activate the remote.
12. To replace the front cover panel, slide the switch to "ON".
13. Once the cover is firmly in place, replace the switch and slide across to the "REMOTE" position.
14. Now your heater should turn on.

Please note, sometimes the program process needs to be repeated a few times, to reactivate the remote.